


INSTALLATION, USER AND REFERENCE MANUAL

Thank you for purchasing the DTAC-102 solar pool heating controller, the most advanced on the world market. DTAC-102 offers simple and intuitive user control for a solar pool heating system, ease of configuration and a mobile App.

The App can remotely control, monitor and report the status and performance of your solar pool heating system.

The DTAC system is backwards compatible with ASCON sensors, and DONTEK "Plus" sensors.

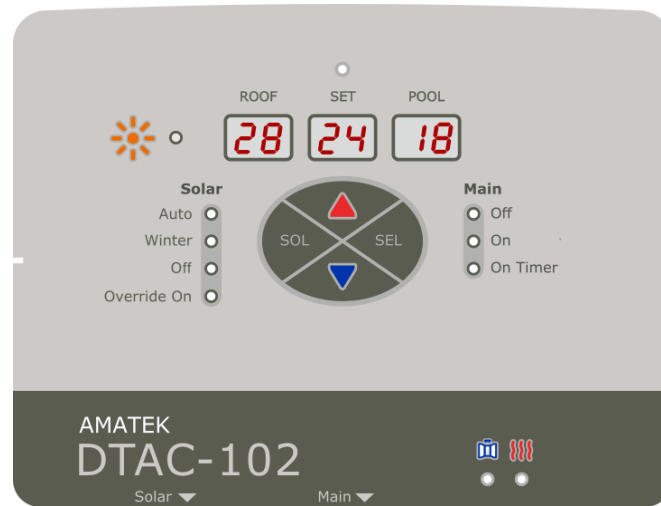

WARNING:

The DTAC product line is rated to supply a maximum combined power of 2.3kW under Approval Certificate NSW29186. If the product is connected to equipment with a load greater than 2.3kW then the DTAC may be damaged. The DTAC product must NOT be installed where sustained overload can occur and it is not warranted under such usage. For a load greater than 2.3kW then an AMATEK PS001A power separator must be used, which can take an additional 2.4kW load, or 4.7kW in total. See Section 9 below for a system load calculator.

It is recommended to install the product under cover, not in direct sunlight, and in accordance with AS/NZS 3000 and AS/NZS 3136.

UNIT UNIQUE ID (UUID)

Please retain this page for future reference

TABLE OF CONTENTS


1	OPERATION SUMMARY	1
1.1	Control panel	1
1.2	Operational Summary	1
2	INSTALLATION.....	2
2.1	Mounting.....	2
2.2	Connecting cables and pumps.....	2
2.2.1	Sensing and Control	2
2.2.2	Stand alone installation	3
2.2.3	Single pump retrofit installation	3
2.2.4	Dual pump retrofit installation.....	3
2.2.5	Heater Interlock Connection.....	4
2.2.6	Phoenix Connector Pinout	4
3	MOBILE DEVICE APP	4
3.1	App download.....	5
3.1.1	User Registration	5
3.1.2	User Sign In	5
3.1.3	Forgotten password	6
3.2	App Overview	6
3.3	Activation.....	6
3.3.1	Cloud Activation	6
3.3.2	Link Accounts	7
3.3.3	QR Code Link Activation	7
3.3.4	UUID Link Activation	7
3.3.5	Re-Activate	7
3.3.6	Delete Account	7
3.4	Control.....	8
3.5	Pump Timer and DTAC Time Settings.....	8
3.5.1	Pump Timer	8
3.5.2	Auto Cooling Timer	9
3.5.3	Time Window Note.....	9
3.5.4	Update/Get DTAC Time	9
3.6	Statistics.....	9
3.6.1	Temperature Log	9
3.6.2	Event Log	10
3.7	Settings	10
3.7.1	Hysteresis and Solar Gain	10
3.7.2	Plumbing Configuration.....	10
3.7.3	Sensor Configuration and Position.....	10
3.7.4	Anti Freeze	11

3.7.5	Auto Cooling Gain.....	11
3.7.6	Heater Configuration.....	11
3.7.7	Diagnostics.....	11
3.7.8	Unit State and Temperature.....	11
3.7.9	Clear Log.....	11
4	FRONT PANEL OPERATION	12
4.1	Main Control.....	12
4.2	Solar Control.....	12
4.3	Configuration Menus.....	12
4.3.1	Cloud/Wi-Fi Setup.....	12
4.3.2	Set Time.....	13
4.3.3	Set Date.....	13
4.3.4	Time Window 1.....	13
4.3.5	Time Window 2.....	14
4.3.6	Auto Cooling Time Window.....	14
4.3.7	Time Window Note.....	14
4.3.8	Temperature Sensor Selection.....	14
4.3.9	Roof Sensor Position.....	15
4.3.10	Plumbing Configuration.....	15
4.3.11	Priming Time.....	15
4.3.12	Enable / Disable Heater.....	16
4.3.13	Hysteresis.....	16
4.3.14	Solar Gain.....	16
4.3.15	Freeze Control.....	16
4.3.16	FreezeThreshold.....	17
5	DTAC-102 Backwash procedure.....	17
6	UNIT SPECIFICATIONS.....	17
6.1	Approvals and Ratings.....	17
6.2	Sensor Compatibility List.....	17
6.3	Power Relay Ratings.....	18
6.4	Valve and Heater Relays.....	18
6.5	Valve actuator Port.....	18
6.6	Material Specifications.....	18
7	WARRANTY AND LIABILITY.....	19
7.1	Warranty on Hardware.....	19
7.2	Limited Software Warranty.....	19
8	DTAC MODEL CROSS REFERENCE.....	20
9	SYSTEM LOAD CALCULATOR.....	21

1 OPERATION SUMMARY

The DTAC-102 is designed as a dual GPO, solar pool heating controller that can operate in standalone, single and dual pump retrofit modes, and with a sophisticated IoT capability integrated into current technology mobile devices.

1.1 Control panel

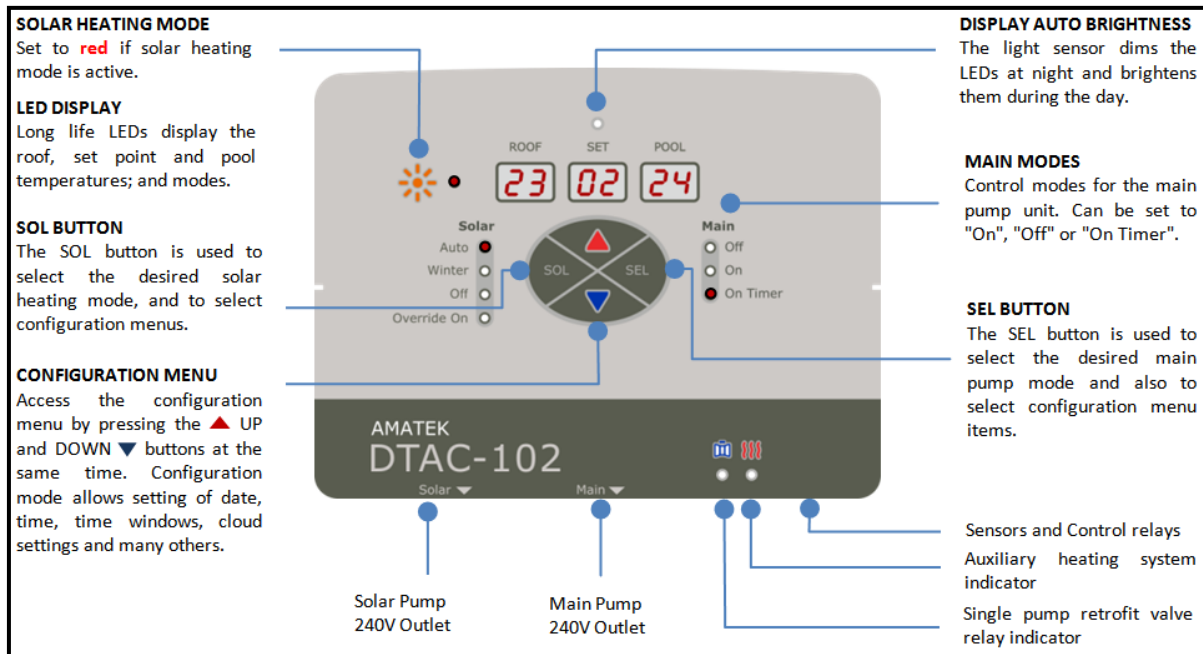

1.2 Operational Summary

Solar Auto

When solar gain is available the pool is heated to the set point temperature during two configurable time windows. Auto Cooling mode is also available, configured by the App.

Solar Winter

Runs the solar pump every day for 6 minutes to maintain pump operation. Saves energy and wear and tear on the pump during winter when the pool is not in use.

Solar Off

Disables the solar pump and heating algorithm, until the next timer "on time" occurs.

Override On

Runs the solar pump until the end of the current or start of the next time window, at which DTAC reverts to the previous Solar control state.

Main Off

Disables both pumps simultaneously, until the next timer "on time" occurs. Can facilitate multiport valve use while backwashing, rinsing or cleaning operations.

Main On

Enables the main pump until the next timer "on time" or "off time" occurs and reverts the Solar pump to its previous state. It can be used for backwashing and rinsing operations.

On Timer

Runs the main pump when the time is within one of the two configurable time windows.

Anti Freeze Mode

Runs the pumps when the roof temperature falls to the freeze threshold (settable between 0-6C) for 3 minutes and thereafter until the roof temperature rises above that or the mode is turned off.

Auto Cooling Mode


When cooling gain is available the pool is cooled to the set point temperature during the specific cooling time window. Enabling the cooling time window disables other time windows.

2 INSTALLATION


Prior to installing ensure that all the other solar heating equipment has been installed and ready including necessary pumps, pipes, chlorinator, valve and filter.

2.1 Mounting

Mount the DTAC on a flat section of a wall using the mounting plate. The mount plate is secured by four screws at the rear of the housing which may be adjusted as necessary to allow the mounting plate freedom to slide. The mounting plate can be removed by pushing it's tongue away from the housing allowing the plate to slide out.

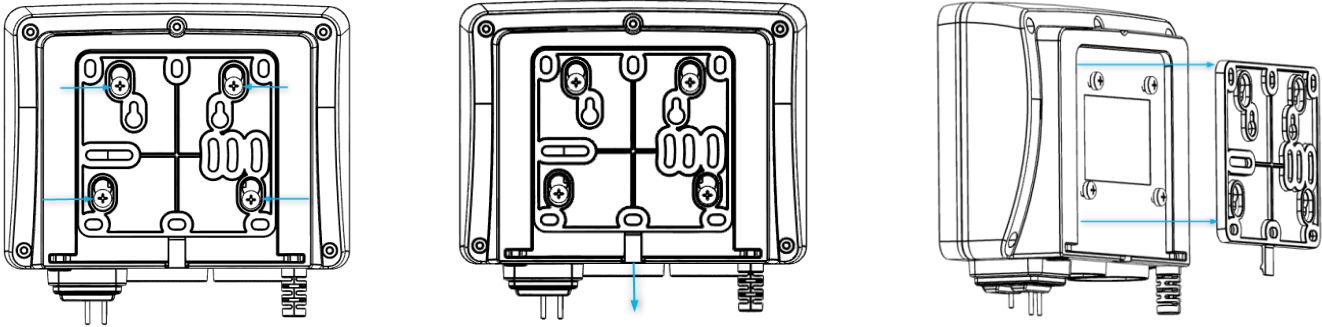

Ensure the tongue is facing down, mark four holes to mount the plate, and drill and screw to the wall. Ensure the plate is flat after tightening the screws so the DTAC may slide on and off easily. The mounting plate has multiple slots and holes allowing it to alternatively be mounted directly to screw holes from other legacy controllers.

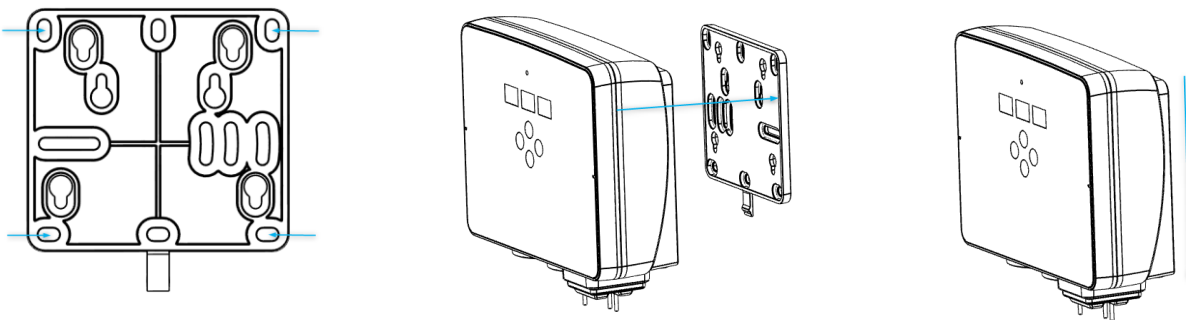

Align the DTAC housing and the mounting plate, then push the housing down to lock the unit on to the wall.

2.2 Connecting cables and pumps

The DTAC-102 uses Phoenix plugs and sockets to allow the following wired connections:

- Wired roof and pool sensors.
- Heater interlock for hybrid system. Allows dry contact relay control of an external heater
- Valve actuator - Allows single pump retrofit mode to redirect water to the roof.
- Variable Speed Drive control (future option).


2.2.1 Sensing and Control

The silicone rubber terminal socket seal protects the cables and plugs from moisture and insects.

Note: Ensure the socket seal is installed correctly during installation and for the product lifetime.


To install the seal, drill the required holes in it so the sensor and control cables can pass through. Then disconnect the Phoenix plugs from the sensors, feed the cables through the holes, and then reconnect them.

Then insert the Phoenix plugs to the correct Phoenix socket as marked below, while leaving enough cable to do so. Finally slide the seal down the wires, press onto the terminal flange and push home until it is firmly in place. You may need to pull the wires gently through the holes to contain them. If necessary use silicon glue to seal the holes.

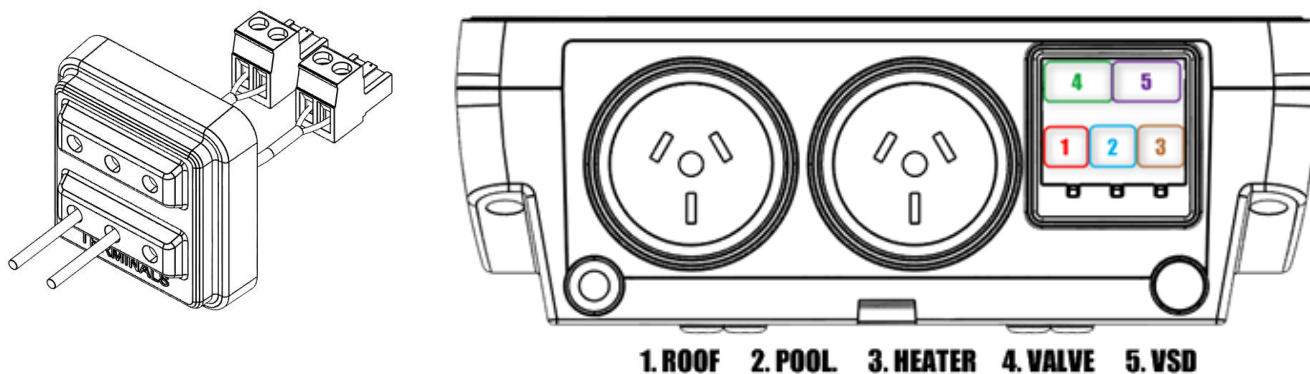

2.2.2 Stand alone installation

Connect the solar pump plug to the solar pump socket.

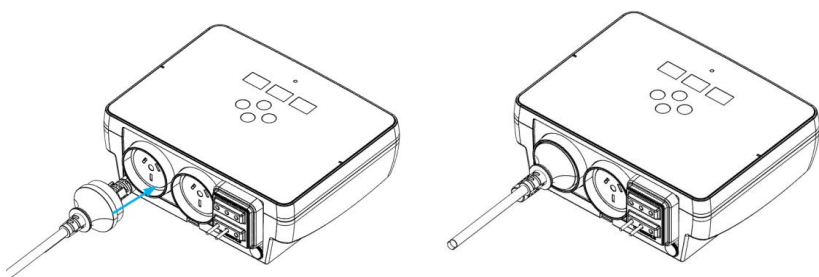


2.2.3 Single pump retrofit installation

Connect the Phoenix connector to the Valve actuator port. Connect the solar pump plug to the solar pump socket.




2.2.4 Dual pump retrofit installation

Connect the solar pump plug to the solar pump socket and the main / filtration pump to the main pump socket.

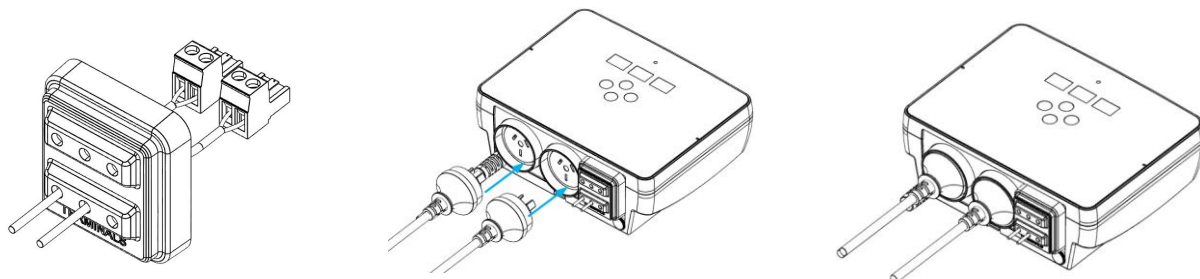

2.2.5 Heater Interlock Connection

The DTAC-102H model can control an external heater with a dry contact closure. Use the same procedure as in Section 2.2.1 to connect the external heater's interlock cable to the interlock connector of the DTAC.

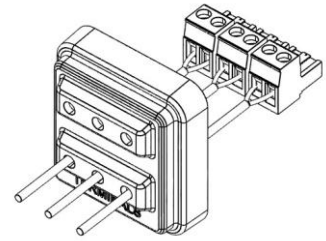

2.2.6 Phoenix Connector Pinout

The Phoenix connector pinout is detailed in the schematic.

1. Roof sensors

- 1.1. DTAC Unpolarised
- 1.2. DONTEK Ground/Shield to -ve terminal
- 1.3. ASCON Ground/Shield to -ve terminal

2. Pool sensors



- 2.1. DTAC Unpolarised
- 2.2. DONTEK Ground/Shield to -ve terminal
- 2.3. ASCON Ground/Shield to -ve terminal

3. Heater Interlock

The heater interlock is a dry contact relay closure and not polarised.

4. Valve actuator

The Valve actuator 3 way Phoenix socket is configured with normally closed (NC) on the left, common in the middle and normally open (NO) on the right. Connect the Jandy wires as follows: Red to NC, black to common, and white to NO. If the valve turns the wrong way when first connected then swap the red and white wires in the Phoenix connector or toggle the Jandy direction switch.

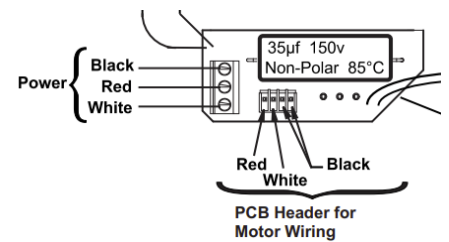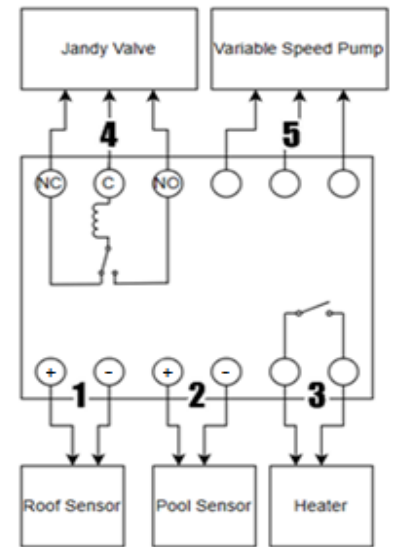

5. Variable Speed Pump (VSD) - Future option

The VSD physical interface will be capable of being connected to three types of VSD pumps:

- A 2 speed pump with 3 wires to select one of 2 speeds
- A continuously variable speed pump controlled over two wires with a voltage of between 0 and 10 Volts
- A VSD with a digital interface using RS485.

The VSD software functionality will be an enhancement released in the future. It is anticipated to be capable of being used for energy efficiency.

3 MOBILE DEVICE APP

A mobile App is available for the DTAC on Android (version 7 and above) devices and iOS (version 15.5 and above) devices.

The App provides a sophisticated yet simple and intuitive remote interface to user control, monitoring, status and performance reporting, configuration and diagnostics of your solar pool heating system.


The DTAC App uses an AWS IoT backend, and is secured with a user account. Upon App installation a user must register to create an account, using a personal email address, an Apple ID account or a Google account..

Once registered, a DTAC unit may be activated on the AWS IoT server. Unit activation gives permission for the DTAC system to collect and store your email address, configuration data and log the pool temperature and control information so that you may display and use it.

3.1 App download

First download the App and install it on your mobile device:

1. Scan the QR code on the unit or box sticker where it is written "Scan to get started." Or go to "www.amatek.com/dtac"
2. Click on "GET IT ON Google Play" if you are using an Android device, and then install it on your mobile device
3. Click on the "Download on App Store" button if you are using an iOS device and then install it on your mobile device


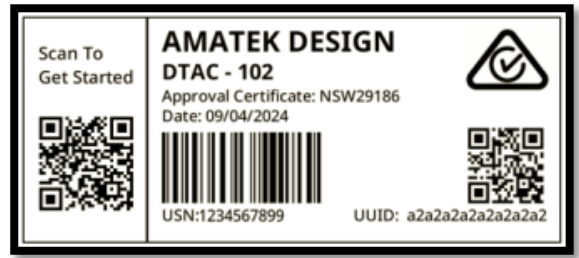


3.1.1 User Registration

Next register a user account. This can be done at the App startup or by pressing the "Register" button on the DTAC website www.amatek.com/dtac. Registration can be done in one of three ways by:

- Using a personal email address and password
- Using your existing Apple account
- Using your existing Google account

After accepting your user details the system will notify you that a verification email has been sent to your registered email address. The user account will be created after you complete the verification process. Failing to verify will result in a system error on that email address that needs Amatek support to resolve.

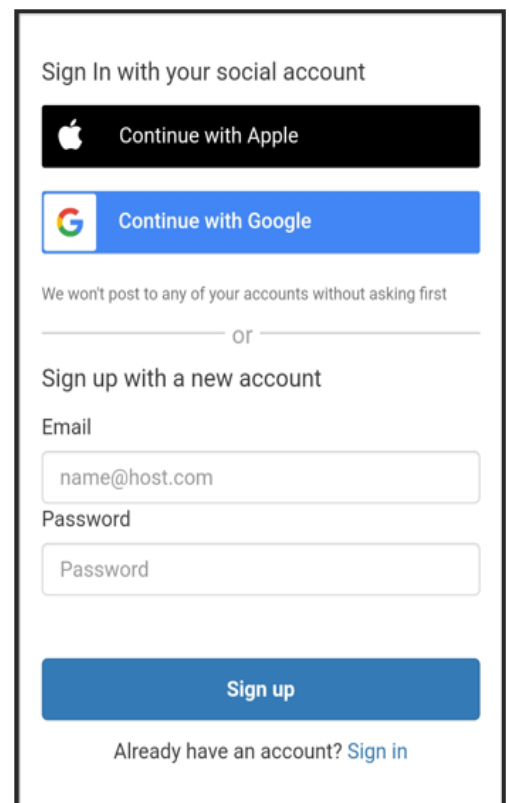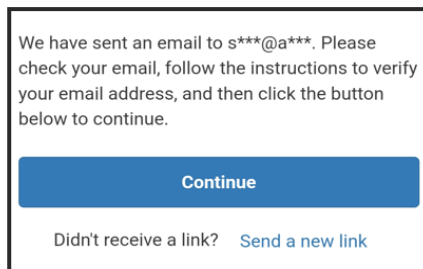

3.1.2 User Sign In

You must Sign In to your account to operate your DTAC remotely. Each account can register one DTAC unit per account. There can be more than one user linked to the same DTAC unit.

There are three Sign In methods,

- "Continue with Apple",
- "Continue with Google" and
- "Already have an account? Sign In" for an email address based account.

Note that the three Sign In methods may not link you to the same DTAC account, so Sign In using the same method that you used to register your account.

3.1.3 Forgotten password

If you registered using an email address and have forgotten your Sign In password, click on the "Forgotten Password" button then enter your registered email address. If the email address is correct, you should receive an email with a link for which you can follow the instructions to reset your password.

If you forgot your social account password you must reset it with Apple or Google.

3.2 App Overview

Five visualisation screens are accessible from the toolbar at the bottom of the App.



1. Control - A mimic panel for the front screen of the DTAC unit
2. Timing - Allows setting of start/stop times, system time and timezone
3. Statistics - Provides graphing of the measured temperatures and control states
4. Settings - Provides a facility to read and set system parameters
5. Activate - Enables activation and linking to a mobile device with the DTAC App

3.3 Activation

After Signing In for the first time you need to activate your DTAC unit which will then allow it to be remotely controlled by your mobile device. You must first complete the account creation, verification and "Sign In" steps detailed in Sections 3.1.1 and 3.1.2.



There are two activation options,

1. If your DTAC unit hasn't been activated yet.
2. If your DTAC unit has previously been activated on one account and you want to link another mobile device and account to this DTAC unit. This allows several family members to share the control, temperature reporting and graph visualisation.

3.3.1 Cloud Activation

Firstly power up the DTAC unit using any available power point, and follow the procedure detailed in Section 4.3.1 Cloud/Wi-Fi Setup and ensure the DTAC is displaying

For first time use, the Activation screen below will be displayed. Click SETUP the cloud and then click on the Start button on the next screen.

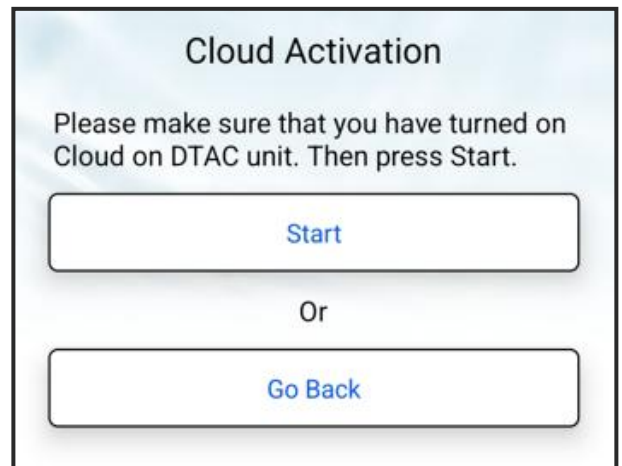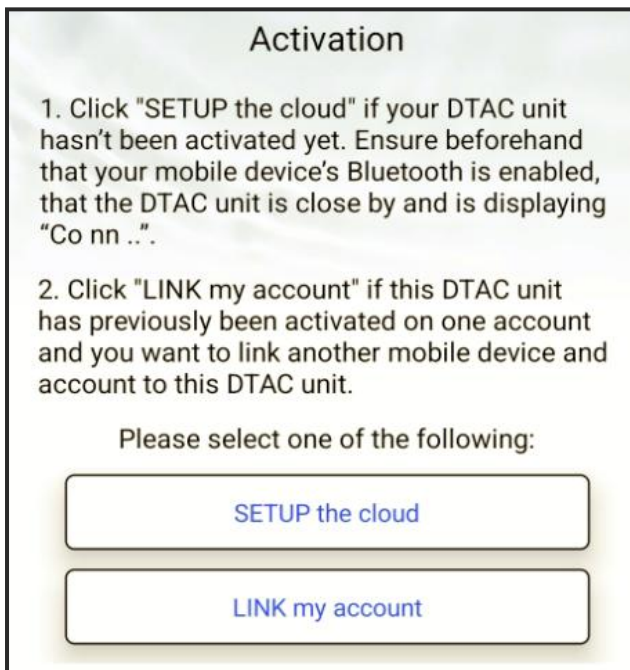

All available Wi-Fi access points are then listed on the bottom half of the page. Choose your Wi-Fi access point, enter the password and click "CONNECT". Upon successful activation the "UNIT IS ACTIVATED" status message is displayed on the screen. Ensure you accept and enable Bluetooth and location permissions if requested.

Once unit activation is completed the DTAC control menu is also available via a web interface (<https://www.amatek.com/dtac>).

3.3.2 Link Accounts

Once a DTAC unit is activated and linked to the first user account then another user account can be linked to it. This is useful for families with multiple mobile devices who want to each member be able to read the pool temperature.

After completing all the steps in the sections above when you get to the Activation screen, click on the "LINK my Account" button. You will be redirected to a page to link the account using a QR code or using the 16 digit UUID.

3.3.3 QR Code Link Activation

There are two parts to QR code activation. The first is displaying the QR code of the mobile device that has already been activated or linked. The second is to scan that QR code by the mobile device that is to be linked to the DTAC unit.


With the mobile device to be linked, click on the "Scan QR Code" button, and the windows below will pop up on your screen. Allow camera permissions and then scan the QR code that is displaying on the mobile device to be linked to.

The second mobile device will then be activated and linked to the DTAC unit of the first device and both mobile devices will be able to use the App for monitoring and control.

3.3.4 UUID Link Activation

You can find the UUID of the unit on the first page of your quickstart manual, on the back of the unit or on the packing box.

To activate using a UUID, enter the UUID of the unit and click on the "Request Code" button. You must be close by the DTAC to read the 6 digit activation code displayed on its front panel. Enter the activation code and click "Submit Code". Upon successful verification, the unit will be activated for this user account.


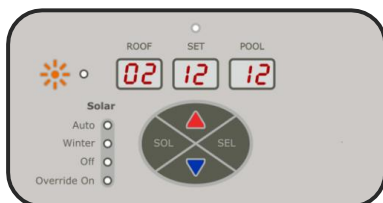


3.3.5 Re-Activate

To re-activate the DTAC if you have changed your WiFi or want to connect to another DTAC unit, click on the "Reactivate" button. Note: This is only applicable to the mobile App.

3.3.6 Delete Account

Click "Delete Account" if you want to delete this user account from the DTAC IoT server.

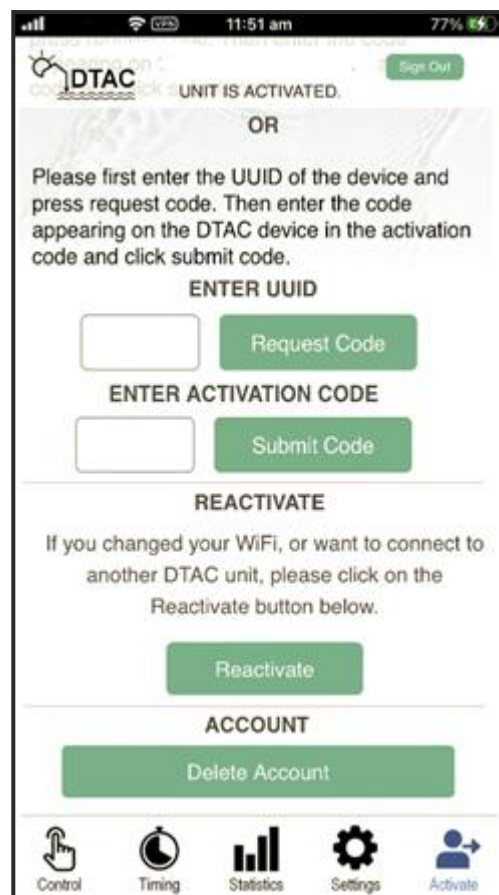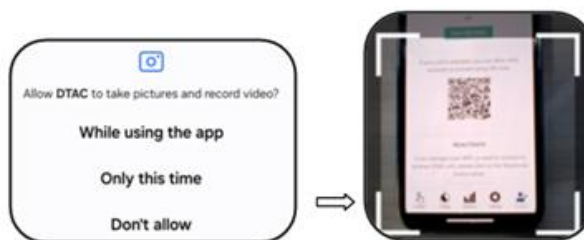


3.4 Control

Click on the toolbar's "Control" Icon to open the DTAC control panel. If the mobile/web App is connected to the unit then live ROOF and POOL temperatures should be displayed. SET the desired temperature of the pool by clicking on the UP or DOWN buttons.

To change the main pump mode click on the "On", "Off" or "On Timer" radio buttons under the "MAIN" heading. ON mode will continue until the end of the current or the next time window and will then revert to "On Timer".

To change the solar pump mode click on "Auto", "Winter", "Off" or "Override On" under the "SOLAR" heading.

- "Auto" automatically runs the solar pump during the time window when there is solar gain. A round yellow sun icon will be shown to the left of the roof temperature when solar gain is available
- "Winter" will run the solar pump once per day for 6 minutes
- "Off" will turn the solar pump off until another mode is selected
- "Override On" will continue running the solar pump until the end of the current or beginning of the next time window

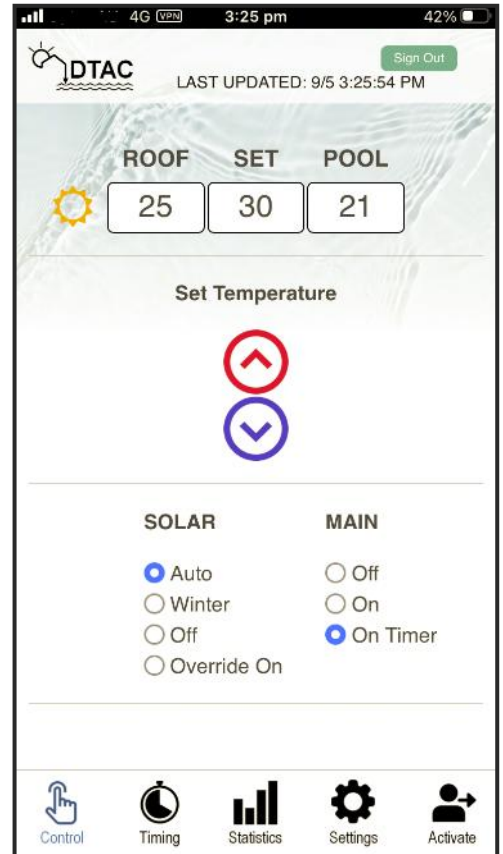

All the setting changes will show a green tick symbol (✓) when the setting has succeeded, otherwise a red cross (✗) will appear to indicate that the setting has not succeeded. The ⌂ symbol indicates that the page is communicating over the Internet and is loading data.



3.5 Pump Timer and DTAC Time Settings

On the bottom panel of the App, click on "Timing" to open the timer settings for the pumps and to configure the system time for DTAC.

3.5.1 Pump Timer

To "Set Timer 1", click the digits under "START" and a moveable clock will appear. Drag the long hand of the clock to set the minutes of the timer; drag the short hand to set the hours of the timer. To switch from AM to PM, slide the AM to PM and vice versa. To accept changes, click away from the clock face. Once Time 1 Start and Time 1 Stop values are set, click "Set Timer 1" to set the timer.

To "Set Timer 2" stop, click the digits under "STOP" and a moveable clock will appear. Drag the long hand of the clock to set the minutes of the timer; the short hand will set the hours of the timer. To switch from AM to PM, slide the AM to PM, vice versa. To accept changes, click away from the clock. Once Time 2 Start and Time 2 Stop values are set, click "Set Timer 2" to set the timer.

To reject changes, refresh the App page by clicking the Timing Icon in the toolbar, or by clicking refresh on your web browser.

3.5.2 Auto Cooling Timer

Auto cooling is similar to the Solar Auto mode, except it cools down to the setpoint, and runs the solar pump when the roof is cooler than the pool by the cooling gain. When cooling gain is available the pool is cooled to the set point temperature during the specific cooling time window. NOTE: Setting a valid start and end time in the AUTO COOLING TIMER windows will automatically enable the cooling time window, and shall disable Timer 1 and Timer 2 time windows. Clearing the Auto Cooling Timer and setting it, will disable Auto Cooling, and the unit will use Timer1 and Timer 2 as normal.

3.5.3 Time Window Note

Note: Setting all time windows to 00:00 and 00:00 shall effectively turn off the controller.


3.5.4 Update/Get DTAC Time

To get the time from the DTAC, click the "Get Time" button. The current DTAC date and time will be displayed under the "Get Time" button.

To update the DTAC time and timezone to Internet time and timezone, click the "Update Time" button.

To update the Time Zone of the DTAC based on the source of cloud server of the App, click the drop down menu of the country/city, then click the "Set Timezone" to confirm.

The DTAC can automatically update its date and time to Internet date and time. Automated updating of the date and time can be enabled by checking the "Automated Date/Time Update" tick box. It can be disabled by unchecking this checkbox.

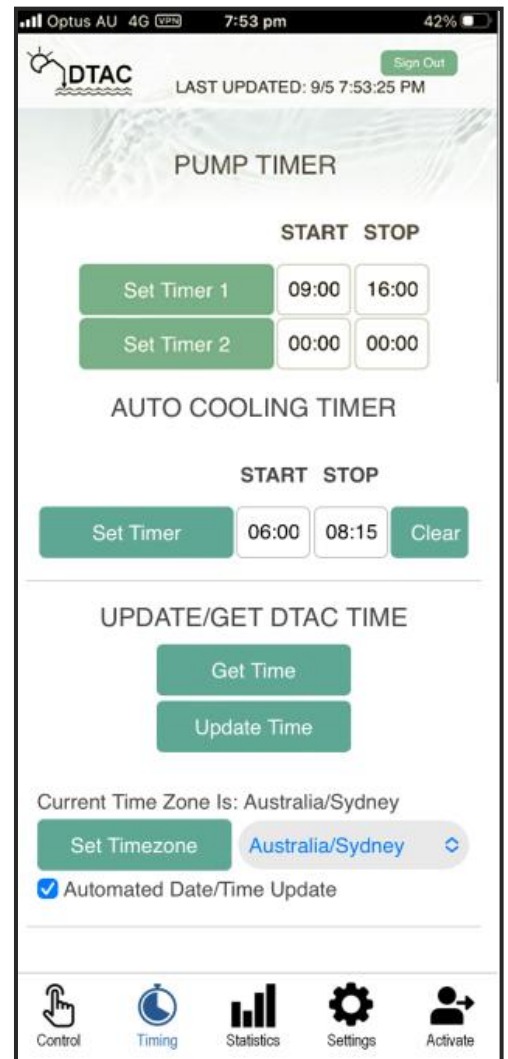

3.6 Statistics

Click on the toolbar's "Statistics" Icon to open the DTAC statistics and the graphs of the TEMPERATURE LOG and the EVENT LOG will be displayed. This may take a few seconds as there can be a lot of data to load.


The DTAC unit samples the temperatures and states of your system and logs this information to your account on the AWS database. The Statistics page defaults to show logs of the last 24 hours, however you can change this view this by clicking on the Daily, Weekly, Monthly and Hourly buttons.

3.6.1 Temperature Log

The TEMPERATURE LOG shows a time graph of the roof, set point, pool, and pipe where the pool sensor is located.

The data-sets can be interactively removed or added by clicking on the data set's legend, for example clicking on the word "Roof" will toggle the view of that data-set.

The red line is a log of the roof temperature, the grey line the set point, the darker blue line the pool temperature and the light blue line the inlet pipe temperature.

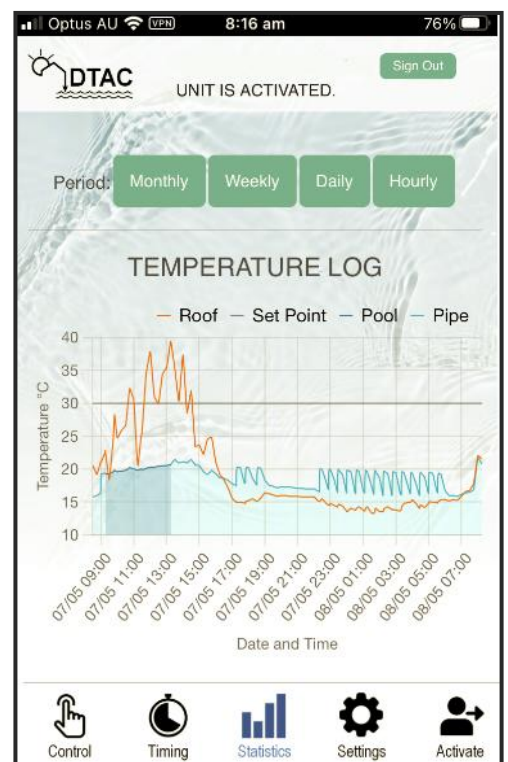

The blue shaded area under the blue line is the temperature of the pool water measured within the time window that the pump is running. When the pump stops, the water in the inlet pipe tends towards the ambient air temperature as no water flowing.

The above graph shows freeze control activated during the night, and a mild increase in pool temperature during a late autumn day, where the ambient air temperature is around 15C.


3.6.2 Event Log

The EVENT LOG shows a time graph of the pump and valve states.


The data-sets can be interactively removed or added by clicking on the data-set's legend.

The grey line is a log of the valve state, the red line the solar pump and the blue line main pump.

This graph shows the pool pump ran during the time window, the solar pump did not, and freeze control activated during the night.

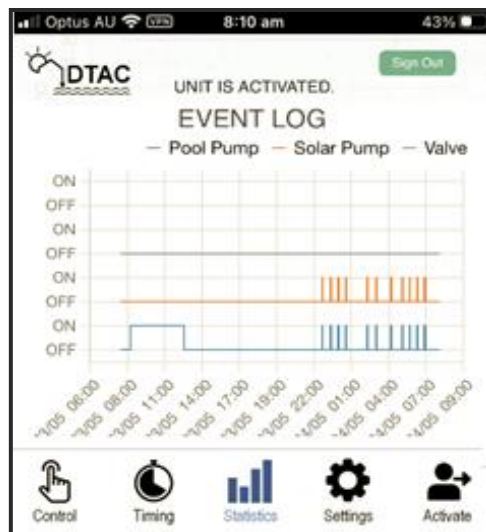

3.7 Settings

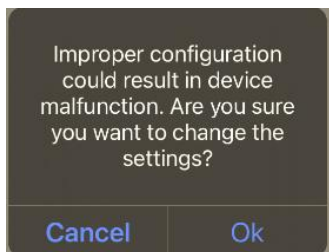

Click on the toolbar's "Settings" Icon to change parameters. You will see this message reminding you to take care when changing parameters, especially the plumbing configuration.

3.7.1 Hysteresis and Solar Gain

The hysteresis value is the threshold above which the system will stop heating after the setpoint is attained, and below which the system will heat. It can be set between 1C and 9C by dragging on or clicking its scroll bar.


The solar gain is the temperature difference between the roof and the pool at which the system will start to heat. It can be set between 1C and 20C by dragging on or clicking its scroll bar.



3.7.2 Plumbing Configuration

The plumbing configuration should only be set once on installation to match your physical plumbing. **Do not change this setting during normal operation or your system may not operate correctly.** This may be set to "Standalone" for an independant system, to "Single Pump Retrofit" where the Valve actuator directs water to the roof, or "Dual Pump Retrofit" where a second boost pump is plumbed in.

"Priming Time(s)" sets the delay to read the pool temperature, between 10 seconds and 600 seconds, done by dragging on or clicking its scroll bar.

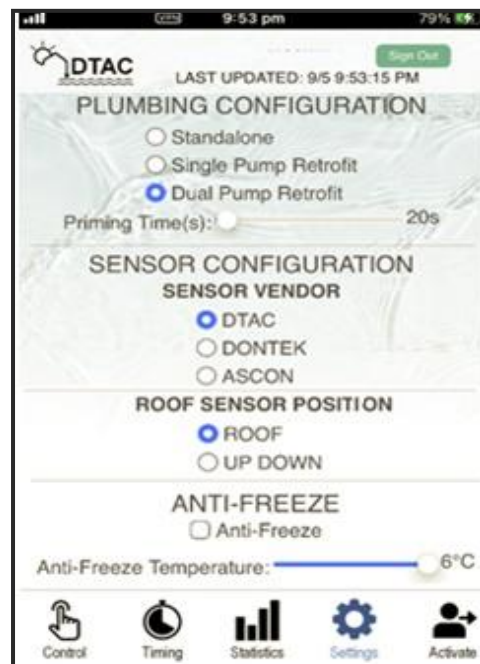

3.7.3 Sensor Configuration and Position


DTAC is the default, however click either "DTAC", "DONTEK" or "ASCON" to change the sensor type. The Roof Sensor Position setting can be configured by clicking "ROOF" or "UP/DOWN" to suit the installation.

3.7.4 Anti Freeze

Anti Freeze may avoid water freezing in pipes by pumping if the roof falls below the Anti Freeze Temperature. It runs for 3 minutes every 30 minutes until the roof temperature rises above the Anti Freeze Temperature, or is disabled. You can configure Anti Freeze to trigger from 0C to 6C.

3.7.5 Auto Cooling Gain

Anti Freeze may avoid water freezing in pipes by pumping if the roof falls below the Anti Freeze Temperature. It runs for 3 minutes every 30 minutes until the roof temperature rises above the Anti Freeze Temperature, or is disabled. You can configure Anti Freeze to trigger from 0C to 6C.

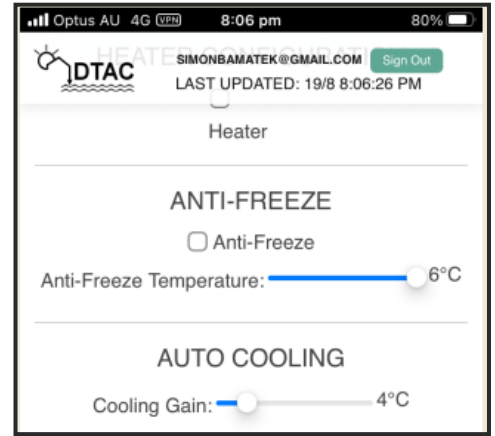

3.7.6 Heater Configuration

To toggle between enabling or disabling heater, click the "Heater Enable/Disable" tick box if it is available. For enable, the check box will be ticked, for disable; the check box will not be ticked.

3.7.7 Diagnostics

This can be used to enable and disable the relays that control the pumps, valve and heater. When Diagnostics is enabled, the relay control will override the system.


During operation, the states of the relays are updated in real time so you can see remotely which relays have been operated.

3.7.8 Unit State and Temperature

Another diagnostic feature for debugging the current state of the system, and monitoring the internal temperature of the unit.

3.7.9 Clear Log

The "Clear Log" button is used to clear all the data logs that are stored in the cloud and will zero any graphs before that time. **Caution: This is a one-time operation and data once cleared cannot be restored back.**

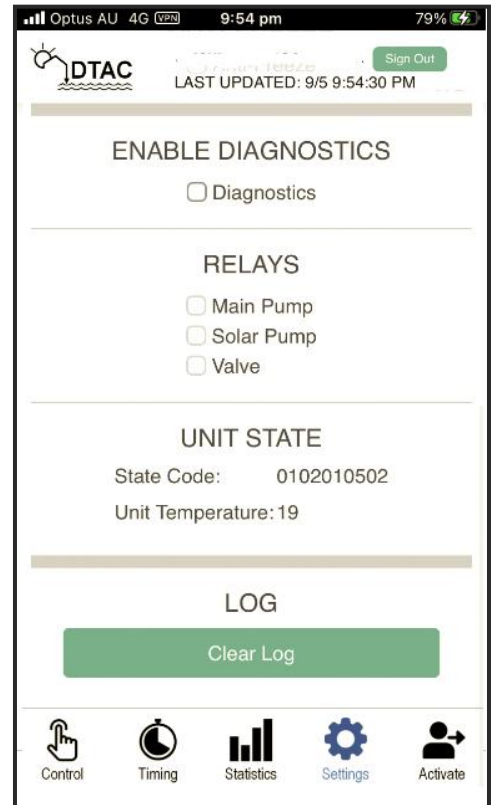

4 FRONT PANEL OPERATION

The DTAC products can be operated from both the front panel and from a mobile App. The three LED displays show the ROOF, SET and POOL temperatures. SET displays the desired temperature when heating. There are four "buttons" on the front panel, UP, DOWN, SOL and SEL. In normal use the SEL button controls the main pump and mode, and the SOL button controls the solar pump and mode.

4.1 Main Control

Pressing the SEL button toggles between the "On" and Off" modes. "On" or "Off" mode will continue until the end of the current or the beginning of the next time window and then revert to OnTimer.



Pressing and holding the SEL button enables "On Timer" mode.

4.2 Solar Control

Pressing the SOL button will cycle the Solar control through "Auto", "Winter" and "Off" modes.

Pressing and holding the SOL button enables "Override On" mode. "Override On" will continue until the end of the current or next time window.

When the solar control not "Off", the UP and DOWN buttons increase or decrease the temperature set point.


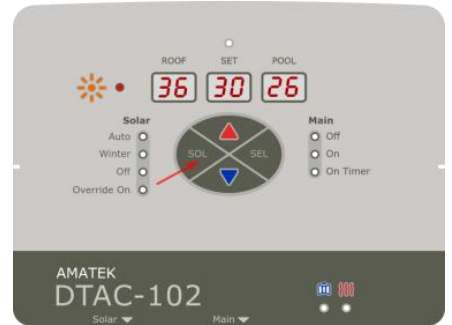
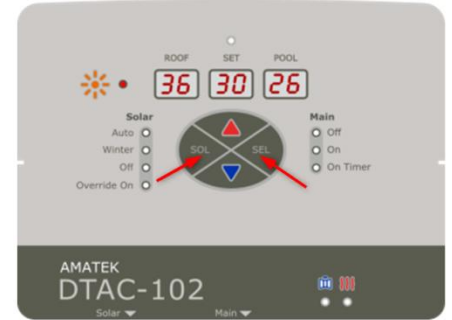


4.3 Configuration Menus

Configuration menus may be entered and exited by holding UP and DOWN at the same time. Pressing the SOL button moves to the next menu item. Pressing the SEL button enters the current menu item and pressing the press SOL button then exits that menu item. If no buttons are pressed after one minute the configuration menus are exited.


4.3.1 Cloud/Wi-Fi Setup

The cloud menu allows Wi-Fi access to the AWS cloud server which supports the DTAC mobile App. To access to the Cloud menu from the operational panel, press and hold the "UP" and "DOWN" buttons together. Ensure the Bluetooth is enabled on the mobile device being used for activation.

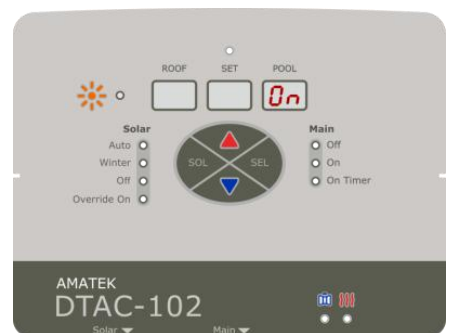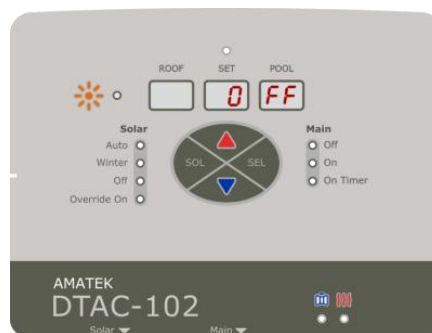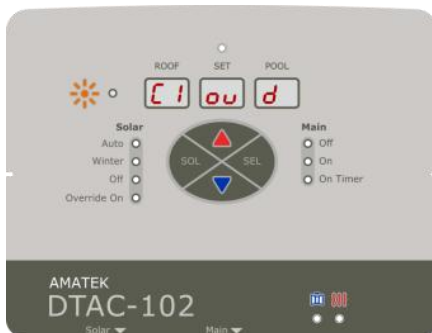

- When "C1 ou d" is displayed, press SEL to enter the menu
- The current cloud status will be shown as either "On" or "OFF"
- Then press UP/DOWN to change the Cloud status, and as the Cloud status cycles the indicator will blink
- If you have changed your WiFi, turn OFF, wait 5 seconds and turn ON again
- Press SEL to enable the cloud / Wi-Fi connection
- While DTAC is setting up connection with the Cloud "Co nn" with dots animation will then be displayed
- Use the mobile App to enter the Wi-Fi passcode and wait for a few seconds

- If the Cloud is successfully connected, the display will show "5U CC E5"
- After showing the Cloud connection result, the software exits the Cloud menu
- To exit the configuration menu hold UP and DOWN or press SOL

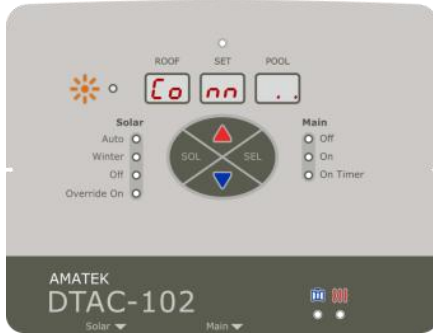

4.3.2 Set Time

- When "tt" is displayed, press the SEL button to enter the time menu
- The time will then be displayed in HH:MM:SS format and the selected digit will blink
- Press UP or DOWN to modify the blinking digit
- Press SEL to go to the next digit
- After all the 6 digits are configured, press SEL to save the newly set time and exit or SOL to exit without saving



4.3.3 Set Date

- When "dA tE" is displayed, press SEL to enter the date menu
- The system date will be displayed in YY:MM:DD format and the selected digit will blink
- Press UP or DOWN to modify the blinking digit
- Press SEL to go to the next digit
- After all the 6 digits are configured, press SEL to save the newly set date and exit or SOL to exit without saving





4.3.4 Time Window 1

Time Window 1 allows user to set the first time window for the pumps to turn ON and OFF

- When "t1" is displayed, press SEL to enter the menu
- The start time will be displayed in HH:MM format, and the selected digit will blink
- Press UP or DOWN to modify the digit
- Press SEL to go to the next digit

- Continue to press SEL until E1 and end time is displayed in the HH:MM format
- Repeat the above steps to configure the end time
- After the last digit is configured, press SEL to save and exit the "Time Window 1" setting or SOL to exit without saving

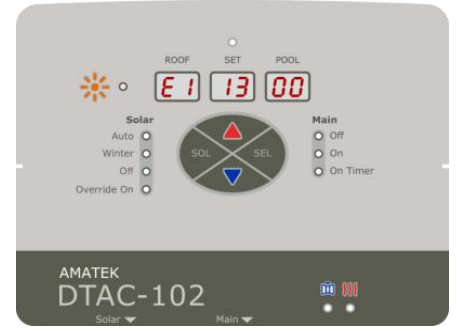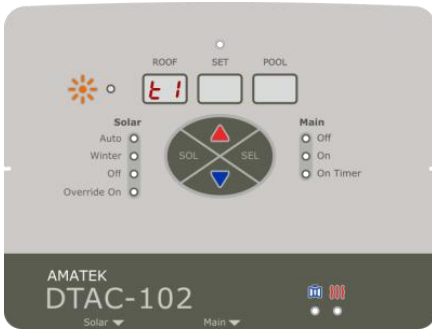

4.3.5 Time Window 2

Time Window 2 allows user to set second time window for the pumps to turn ON & OFF

- When "t2" is displayed, press SEL to enter the menu
- Follow the same procedure as listed above for Time Window 1



4.3.6 Auto Cooling Time Window

The Auto Cooling Time Window can only be set by the App

4.3.7 Time Window Note

Note: Setting all time windows to 00:00 and 00:00 shall effectively turn off the controller.



4.3.8 Temperature Sensor Selection

The temperature sensor menu allows one of three sensor types to be selected:

- 0 for a DTAC sensor
- 1 for a Dontek analogue sensor
- 2 for an Ascon sensor
- 3 for a DTAC wireless sensor (Reserved for a future release so do not select)

Pool and roof sensor types can not be individually selected, but are selected in pairs

- When "t5 En 5r" is displayed, press SEL to enter the menu
- Press UP or DOWN to choose the sensor type
- Press SEL to confirm, exit and save the selected sensor type or SOL to exit without saving

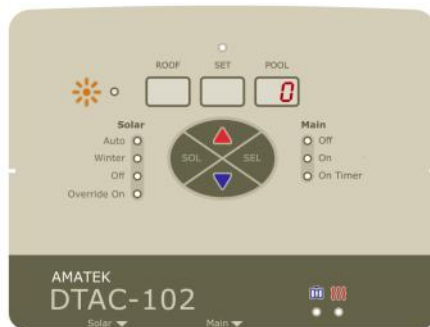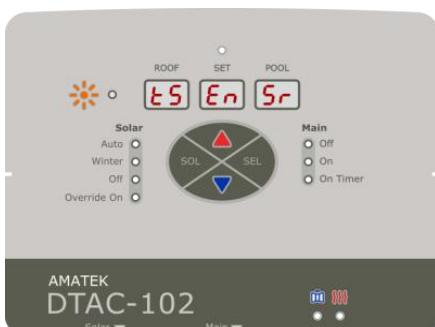


4.3.9 Roof Sensor Position

The roof sensor may be configured in one of two modes, with the DTAC start up default being Roof

- Up / Down (ud on the display)
- Roof (rooF on the display)

When in Up / Down mode there is a pump priming period applied When in roof mode, no priming period is applied for sensing roof temperatures

- When "rF SE t" is displayed, press SEL to enter the menu
- Press the UP/DOWN button to change to roof mode and "rooF" will start blinking
- Press the UP/DOWN button again to change to Up/Down mode and "ud" will start blinking
- Press SEL to save the selection and exit or press SOL to exit without saving

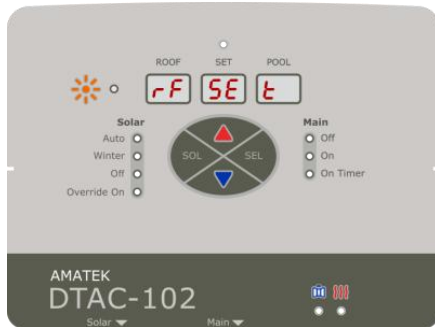


4.3.10 Plumbing Configuration

There are three plumbing configurations:


- 0 for standalone (default)
- 1 for single pump retrofit
- 2 for dual pump retrofit

- When "P1 Ct r1" is displayed, press SEL to enter the menu.
- Press UP / DOWN to change the plumbing configures type.
- Press SEL to save the configuration and exit or press SOL to exit without saving

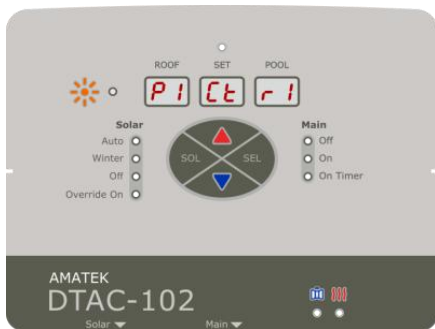


4.3.11 Priming Time

- When "Pri tt" is displayed, press SEL to enter the menu and the selected digits will blink
- Press UP or DOWN to modify those digits, and press SEL for the next digits
- Press SEL to save the configuration and exit or press SOL to exit without saving

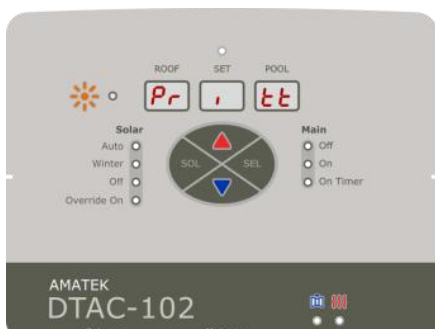

4.3.12 Enable / Disable Heater


- When "HE At Er" is displayed, press SEL to enter the menu
- The default heater state is "Off"
- Press UP / DOWN to change the heater state to "On" the text, "On" will start blinking if selected
- Press SEL to save the heater state and exit or press SOL to exit without saving

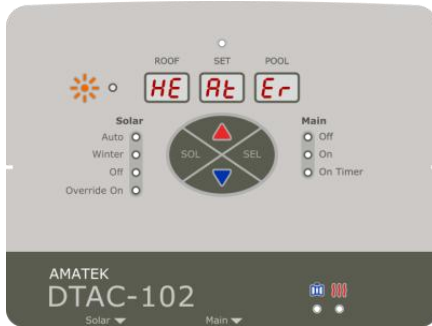

4.3.13 Hysteresis

The hysteresis menu allows the selection of the differential, being the temperature difference limit that must be measured before the system changes state to heat or stop heating. The larger the difference, the less "hunting" the system will do to maintain temperature.



- When "HY 5t Er" is displayed, press SEL to enter the menu
- The hysteresis values range from 1C to 9C. The default value is 1C
- Press UP / DOWN to change the hysteresis value
- Press SEL to save the hysteresis value and exit or press SOL to exit without saving

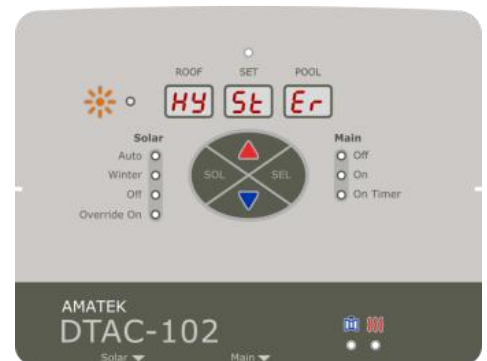

4.3.14 Solar Gain

Solar heating gain is the difference between the measured roof and pool temperatures. When the solar heating gain is equal to or greater than the solar gain setting, the solar pump will operate. Solar gain can be set from 1C to 20C. The default solar heating gain is 1C.

- When "50 LA rG " is displayed, press SEL to enter the menu
- Press SEL to go into the solar gain menu and the solar heating gain will be displayed
- Press UP / DOWN to change the value
- Press SEL to save the solar gain value and exit or press SOL to exit without saving

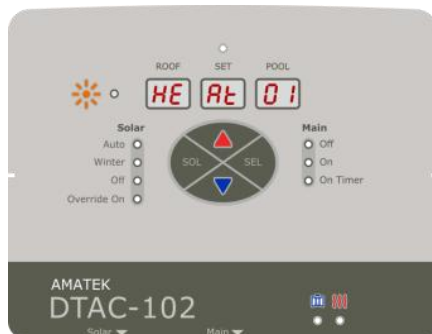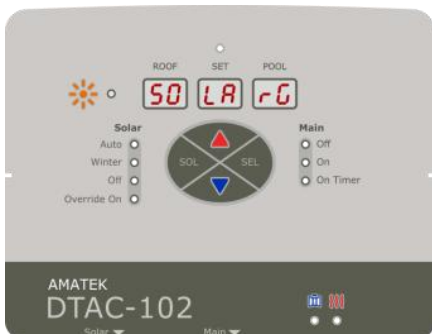


4.3.15 Freeze Control

If a system measures a roof temperature below the freeze control threshold, then it will run the solar pump for 3 minutes, and then wait another 30 minutes to check again. This will continue until the roof temperature rises above the freeze control threshold.


Note Well: Freeze Control will only operate when the Solar mode is set to Auto or Winter. If the Solar mode is off, then freeze control will not operate.

- When "Fr Ct r1" is displayed, press SEL to enter the menu
- The default freezing control state is "Off"
- Press UP or DOWN to change the freezing control state to "On" or "Off"
- The text "On" or "0 FF" will start blinking if selected
- Press SEL to save the freezing control state and exit or press SOL to exit without saving

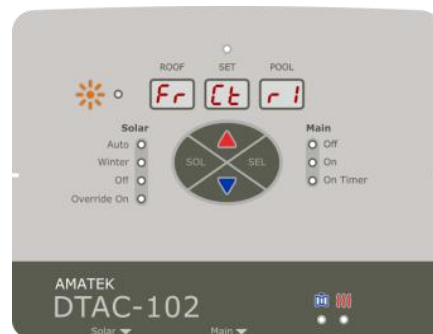

4.3.16 FreezeThreshold

- When "Fr th rE" is displayed, press SEL to enter the menu
- The default freezing threshold is 6 degree Celcius
- The freezing threshold range is from 1 degree to 6 degree
- Press UP/DOWN to change the value
- Press SEL to save the freeze threshold and exit or press SOL to exit without saving

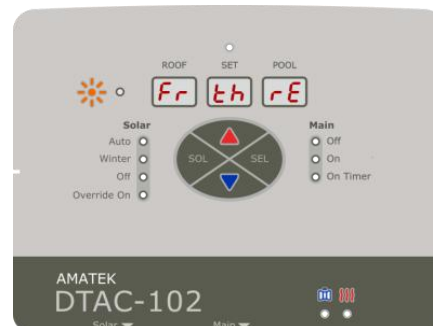

5 DTAC-102 Backwash procedure

Note that backwashing the pool with a retrofit system requires the solar pump to be turned off during the backwash as the system does not know the position of the filter's multiport valve, and if the solar gain is sufficient, then the solar pump will run with no water input, or the valve will move to the heating position. To backwash a retrofit system do the following:

1. Turn the Solar to Off
2. Turn the Main to Off
3. Rotate the multiport valve to backwash
4. Turn the Main to On
5. When you have finished backwashing, turn the Main to Off
6. Rotate the multiport valve to rinse (Optional)
7. Turn the Main to On (Optional)
8. Rinsed turn the Main to Off (Optional)
9. Rotate the multiport valve to filter
10. Turn the Main to On
11. Turn the Solar back to Auto

6 UNIT SPECIFICATIONS

6.1 Approvals and Ratings

Approval Certificate	NSW29186
Input	230VAC, 50Hz, 10A, 2.3kW
Max Total Output Load	9.9A 2.28kW
Insulation	Double insulated water circuit
IP rating	IP33 (Keep out of direct sun, rain and pool zone)
Temperature	0C - 40C
Altitude	3,000m

6.2 Sensor Compatibility List

ASCAN
MS3D Roof Sensor for Pool Pool / Spa Heating Controller
MS3D Pool / Cold Sensor for Pool / Spa Heating Controller
Dontek (M denotes meters)
TS02P (2.5M) [2.5M Shielded Cable - "Plus" Series suit AS5 AS2+ AS3+]

TS01P (20M) [Heavy Duty Poly Propylene - "Plus" Series suit AS5 AS2+ AS3+]
TS01SP (20M) [Shielded Cable - "Plus" Series suit AS5 AS2+ AS3+]
TS08P (50M) [50M Heavy Duty Poly Propylene - "Plus" Series suit AS5 AS2+ AS3+]
TS23P (100M) [Heavy Duty Poly Propylene - "Plus" Series suit AS5 AS2+ AS3+]

6.3 Power Relay Ratings

Contact Material	AgSnO2 AgCdO
Contact Rating(Resistive)	20A,25A/250VAC; 25A/277VAC
Motor Load	2HP 240VAC Max
Switching Power	6925VA Max
Switching Voltage	277VAC Max
Switching Current	25A

6.4 Valve and Heater Relays

Valve Relay DPST	3 A at 48 VAC (NO/NC)
Heater Relay SPST	3 A at 48 VAC (NO)

6.5 Valve actuator Port

15V @ 0.5A (Able to driver a 24V Valve actuator efficiently)
--

6.6 Material Specifications

Housing	ASA UL940/V0
Silicon Seal	Silicon UL94/V0
Sensor Cable	Silicone

7 WARRANTY AND LIABILITY

7.1 Warranty on Hardware

- (1) Subject to the following clause (1) **SUPPLIER** warrants that the goods delivered by **SUPPLIER** shall be free from defects in material and workmanship.
- (2) **SUPPLIER** shall be released from obligations in the event that the goods are subject to misuse, neglect, accident, improper installation or any unusual or unrecommended physical, environmental or electrical stress (including improper voltage or power surge) by **BUYER** or if repairs or modifications are made by persons other than **SUPPLIER's** own or authorised service personnel (unless such repairs by others are made within the consent of **SUPPLIER** which consent will not be unreasonably withheld in the case where such persons are reputable and adequately and properly trained).
- (3) Limited three year warranty, first year full warranty, second and third year back to base warranty.
- (4) Amatek Design reserves the right to investigate, determine the cause of failure and replace or refund at its sole discretion.

7.2 Limited Software Warranty

- (1) **SUPPLIER** does not warrant that software or firmware supplied under this Agreement:
 - (a) will operate error free;
 - (b) will operate uninterrupted while in use;
 - (c) will meet the customers requirements other than those set out in specifications accepted by **SUPPLIER**; or;
 - (d) will provide any function not designated in such specifications.
- (2) **SUPPLIER** agrees to use its best endeavours to rectify or replace the software or firmware at its option and at its own expense when such defect has been detected by Buyer and notified to **SUPPLIER** in writing within 90 days of the software or firmware satisfactorily completing the relevant tests specified or prescribed by Buyer, provided the details of such tests have been advised by Buyer to **SUPPLIER** prior to delivery of the software to Buyer.
- (3) If testing of delivered software has not occurred within 30 days of the date of delivery the software is deemed to be accepted by Buyer.
- (4) If investigation of a problem reported vide clause (2) establishes that the cause of the report is not **SUPPLIER** software, **BUYER** agrees to pay on Invoice the charges for the effort expended by **SUPPLIER** in researching the reported problem.
- (5) Subject to clauses (1) and (2) **BUYER** acknowledges that the goods including related software and firmware provided to **BUYER's** specification are of a design capacity, manufacture and performance as selected by **BUYER**.
- (6) All conditions, warranties and representations on the part of **SUPPLIER** in relation to the goods or the software, whether expressed or implied, statutory or otherwise, whether collateral or antecedent hereto including but not limited to any warranty or condition of fitness for a particular purposes are hereby expressly excluded, provided that nothing herein contained purports to exclude, restrict or modify the operation or effect of any terms compulsory implied in this Agreement by virtue of any legislation.
- (7) Subject to clause (6) **SUPPLIER** shall not be liable to any person for any special, general or consequential damages, including but not limited to loss or profits from any cause whatsoever arising out of or in any way connected with **SUPPLIER's** obligations under this Agreement
- (8) **SUPPLIER's** liability under this Agreement shall be limited, at the option of **SUPPLIER** where goods or software are supplied to the replacement cost of the goods or software, the repair for the goods or software, or payment of the replacement cost of the goods or software.
- (9) **SUPPLIER** further warrants that this Agreement does not in any way infringe upon any registered trademark, trade name or patent or upon the right entitlement or interest of any firm, person or corporation not a party to this Agreement pursuant to the Copyright Act or otherwise.

8 DTAC MODEL CROSS REFERENCE

#	Model	Feature							
		Solar Pump Relay	Main Pump Relay	Wireless Remote Support	Valve Relay	Heater Relay	VSD	Chlorinator Input	Energy Monitor
1	DTAC-101	✓		✓					
2	DTAC-101S	✓		✓			✓		
3	DTAC-102	✓	✓	✓	✓				
4	DTAC-102H	✓	✓	✓	✓	✓			
5	DTAC-102C	✓	✓	✓	✓			✓	
6	DTAC-102HC	✓	✓	✓	✓	✓		✓	
7	DTAC-102S	✓	✓	✓	✓		✓		
8	DTAC-102HS	✓	✓	✓	✓	✓	✓		
9	DTAC-102CS	✓	✓	✓	✓		✓	✓	
10	DTAC-102HCS	✓	✓	✓	✓	✓	✓	✓	
11	DTAC-101E	✓		✓	✓				✓
12	DTAC-101SE	✓		✓	✓		✓		✓
13	DTAC-102E	✓	✓	✓	✓				✓
14	DTAC-102HE	✓	✓	✓	✓	✓			✓
15	DTAC-102CE	✓	✓	✓	✓			✓	✓
16	DTAC-102HCE	✓	✓	✓	✓	✓		✓	✓
17	DTAC-102SE	✓	✓	✓	✓		✓		✓
18	DTAC-102HSE	✓	✓	✓	✓	✓	✓		✓
19	DTAC-102CSE	✓	✓	✓	✓		✓	✓	✓
20	DTAC-102HCSE	✓	✓	✓	✓	✓	✓	✓	✓
21	DTAC-101X	✓							
22	DTAC-102X	✓	✓		✓				
23	DTAC-102HX	✓	✓		✓	✓			

9 SYSTEM LOAD CALCULATOR

Use this calculator to record the system power. If the total power is greater than 2300W, then an AMATEK PS001A power separator MUST be used. Failure to do so shall void the DTAC warranty.

ACCEPTABLE SYSTEM LOAD EXAMPLE

ITEM	MODEL NUMBER	MAX (W)	POWER SOURCE
CHLORINATOR	WATERMAID WM40	450W	DTAC MAIN
MAIN PUMP	ONGA P100	700W	CHLORINATOR
SOLAR PUMP	ONGA P100	700W	DTAC SOLAR
TOTAL DTAC POWER		1,850W	

UNACCEPTABLE SYSTEM LOAD EXAMPLE

ITEM	MODEL NUMBER	MAX (W)	POWER SOURCE
CHLORINATOR	WATERMAID WM40	450W	DTAC MAIN
MAIN PUMP	ONGA SUPERFLO 1500	1,500W	CHLORINATOR
SOLAR PUMP	DAVEY StarFlo SF DSF1100	700W	DTAC SOLAR
TOTAL DTAC POWER		2,650W	

ACCEPTABLE SYSTEM LOAD EXAMPLE WITH PS001A

TOTAL PS001A POWER IS TO BE < 2,400W

TOTAL DTAC POWER IS TO BE < 2,300W

ITEM	MODEL NUMBER	MAX (W)	POWER SOURCE
POWER SEPARATOR	PS001A		GPO
CHLORINATOR	WATERMAID WM40	450W	PS001A
MAIN PUMP	ONGA SUPERFLO 1500	1,500W	CHLORINATOR
TOTAL PS001A POWER		1,950W	
SOLAR PUMP	DAVEY StarFlo SF DSF1100	700W	DTAC SOLAR
TOTAL DTAC POWER		700W	

CALCULATE YOUR SYSTEM POWER BEFORE INSTALLATION.

TOTAL PS001A POWER IS TO BE < 2,400W

TOTAL DTAC POWER IS TO BE < 2,300W

ITEM	MODEL NUMBER	MAX (W)	POWER SOURCE
POWER SEPARATOR	PS001A		GPO
CHLORINATOR			
MAIN PUMP			
TOTAL PS001A POWER			
SOLAR PUMP			DTAC SOLAR
TOTAL DTAC POWER			

PREPARED: PS	DATE: 5/11/23	PROJECT: DTAC-102
APPROVED: SB	DATE: 20/12/24	DOC NUMBER: A100J101F080D009R005
STATUS	RELEASE	

© Amatek Design (2024). All Rights Reserved. Copyright protects this material. Except as permitted by the Copyright Act, reproduction by any means (photocopying, electronic, mechanical, recording or otherwise), making available online, electronic transmission or other publication of this material is prohibited without the prior written permission of Amatek Design.

AMATEK DESIGN

ABN 15 100 790 109
 501/781 Pacific Highway
 Chatswood 2067
 Email: dtacsupport@amatek.com
 Sales: sales@amatek.com
 www.amatek.com